myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for FISHER & PAYKEL DISHDRAWER DD603. You'll find the answers to all your questions on the FISHER & PAYKEL DISHDRAWER DD603 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual FISHER & PAYKEL DISHDRAWER DD603
User guide FISHER & PAYKEL DISHDRAWER DD603
Operating instructions FISHER & PAYKEL DISHDRAWER DD603
Instructions for use FISHER & PAYKEL DISHDRAWER DD603
Instruction manual FISHER & PAYKEL DISHDRAWER DD603

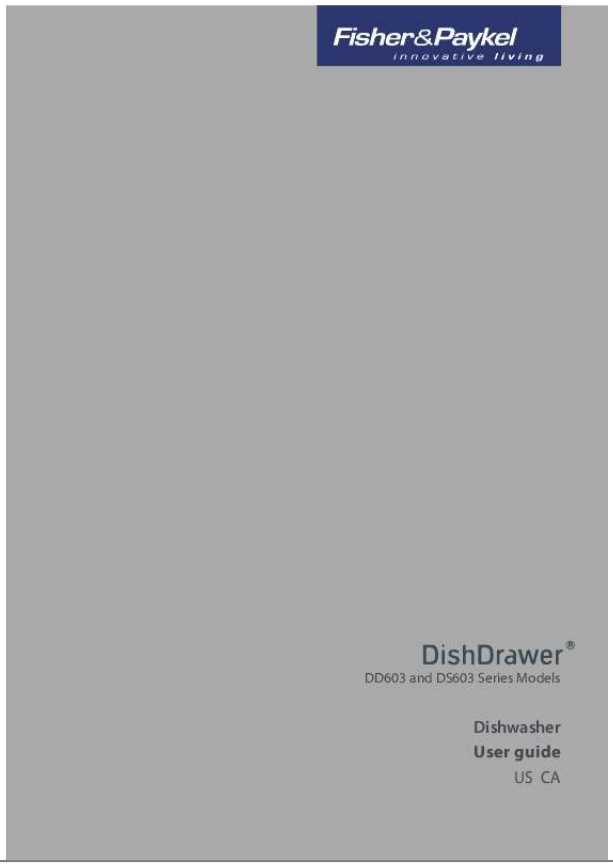

Your user manual
FISHER & PAYKEL DISHDRAWER DD603

Manual abstract:

Do not operate this appliance if it is damaged, malfunctioning, partially disassembled or has missing or broken parts, including a damaged power supply cord or plug. Do not store or use petrol, or other flammable vapors and liquids in the vicinity of the DishDrawer®. Connect to a properly rated, protected and sized power supply circuit to avoid electrical overload. Make sure that the power supply cord is located so that it will not be stepped on, tripped over or otherwise subject to damage or stress. Do not install or store the DishDrawer® where it will be exposed to temperatures below freezing or exposed to weather. Do not use an extension cord or a portable electrical outlet device (e.g. multi socket outlet box) to connect the DishDrawer® to the power supply. Maintenance Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in this User Guide. We recommend that you call an Authorized Service Agent.

Keep the floor around your appliance clean and dry to reduce the possibility of slipping. Keep the area around/underneath your appliance free from the accumulation of combustible materials, such as lint, paper, rags and chemicals. When cleaning the underside of the filter plate, care must be taken on the sharp outer edge to avoid the risk of cut type injuries. Operational Important! Under no circumstances should you open the drawer whilst the DishDrawer® is in operation. Always press the button to pause and wait until you hear the three additional beeps before opening the drawer.

The DishDrawer® must be used with the motor assembly, filter plate, drain filter and spray arm in place. When disconnecting the appliance pull the plug rather than the power supply cord or junction of cord to avoid damage. Take care when loading the DishDrawer® not to load dishware items so it prevents the lid from properly sealing with the drawer. Items should be placed so they do not protrude above and/or forced into the drawer, otherwise a service call may result. Household appliances are not intended to be played with by children.

Children or persons with a disability which limits their ability to use the appliance, should have a responsible person instruct them in its use. The instructor should be satisfied that they can then use the appliance without danger to themselves or their surroundings. Close supervision is necessary if this appliance is used by or near children. Do not allow children to play inside, on or with this appliance or any discarded appliance. If a Dishwasher cleaner is used, we would strongly recommend a wash program with detergent should be run immediately afterward, to prevent any damage to the DishDrawer®. The DishDrawer® is designed for washing normal household utensils. Items that are contaminated by petrol, paint, steel or iron debris, corrosive, acidic or alkaline chemicals are not to be washed in the DishDrawer®. If the DishDrawer® is not being used for long periods of time, turn the electricity and water supply to the DishDrawer® off. Do not pour detergent or rinse agent into the salt reservoir. The detergent or rinse agent will destroy the water softener.

Important! This User Guide should be retained with the appliance for future reference. Should the appliance be sold or transferred to another owner, always ensure that the User Guide is left with the appliance in order that the new owner can become familiar with the appliance and the relevant warnings. DishDrawer® user guide Contents Installation checklist Important safety information Controls (Integrated badge and Prefinished models with no LCD) 2 LCD Controls 4 Operation 6 Wash program chart 7 Caring for your dinnerware 8 Dishwasher standards test 9 Accessories 10 Loading 12 Detergent dispenser 14 Water softener 16 Rinse agent dispenser 18 Option adjustment 19 User maintenance instructions 22 Trouble shooting 25 Fault codes 28 Limited warranty 30 DishDrawer® Prefinished model with LCD controls DishDrawer® Integrated with badge controls This User Guide explains how to operate and maintain your new appliance properly and safely. Please read the whole guide carefully before starting to use your appliance..

Your user manual
FISHER & PAYKEL DISHDRAWER DD603